

## Maintenance Plan - Terrier SV

**Version: 100-130 LS-AS**  
**Volume: 10m<sup>3</sup>- 13m<sup>3</sup>**  
**JOHN DEERE engine, 4 cylinders, EMR3**

- Check / Adjust
- Replace
- ▲ Clean
- X Grease

			Working hour interval							
			After the first		Every		After			
	CODE	Q.TY	10	100	8	50	250	500	1000	2000
ENGINE OIL (15W40)	98000004	15 l	●	■		●	■			
ENGINE OIL FILTER (RE507522)	99003021	1		■			■			
DIESEL FUEL PREFILTER (RE529643)	99003034	1					▲	■		
DIESEL FUEL FILTER (RE522878)	99003035	1						■		
INTERNAL AIR FILTER CARTRIDGE (SC10-11317)	99011993	1			▲			■		
AIR FILTER CARTRIDGE (CH10-11308)	99011994	1			▲			■		
EXTERNAL CABIN AIR FILTER (AP6225)	98400952	1			▲			■		
INTERNAL CABIN AIR FILTER	98405265	1			▲			■		
COOLANT (Eni Antifreeze Bike S)	98400553	32 l	●				■ 2000 hours or 2 years			
HYDRAULIC OIL FILTER CARTRIDGE (CA 302-CD)	99007302	1						■		
HYDRAULIC OIL (Agip Oso 46)	98000000	85 l	●			●				■
AUGER GEARBOX OIL (AGIP BLASIA 220)	98000001	15 l	●	■		●				■
TRANSMISSION OIL SI351 (AGIP BLASIA 220)	98000001	2.5 l	●	■		●				■
SPEED GEARBOX OIL (AGIP BLASIA 220)	98000001	10 l	●	■		●				■
MILLING CUTTER GEARBOX OIL (Agip Blasias 220)	98000001	1.5 l	●	■						■
PUMP MILLING CUTTER MULTIPLIER OIL (Agip Blasias 220)	98000001	0.8+0.9 l	●	■		●				■
WHEEL GEARBOX OIL (Agip Oso 46)	98000000	-	Lubrication from hydraulic circuit							
BRAKE OIL (Agip DOT4)	98000012	0.7 l	●							■ 2000 hours or 2 years
AUGER BLADE KIT		1	●				●			
MILLING CUTTER BLADE KIT		1	●				●			
WEAR - LOCKING SCREW AND NUTS AUGER KNIVES			●				●			
WHEEL NUT TIGHTENING			●	●			●			
OVERALL BOLT AND NUT TIGHTENING			●				●			
1« LEAK CHECKING FROM HYDRAULIC SYSTEM PIPES HYDRAULIC PIPE AND FITTING TIGHTENING			●			●				
AIR CONDITIONER BELT								●		
ENGINE BELT								●		
INTAKE PIPING			●					●		
BATTERY								●		
CLUTCH			Automatic registration							
SUSPENSIONS			●					●		
2« RADIATOR CLEANING					▲					
LOADING CONVEYOR			●		▲	●				
UNLOADING CONVEYOR			●		▲	●				
2« ENGINE COMPARTMENT CLEANING						▲				
FRONT WHEELS (245/70 R19.5)	99100087	2					●8 bar			
REAR WHEELS (445 R19.5)	99100193	2					●8 bar			
UNLOADING DOOR GUIDES							X			
CARDAN SHAFT CROSSES						X				
BEARINGS / BUSHINGS						X				
CYLINDERS AND PIVOT PINS						X				
OTHER GREASING POINTS							X			

**NOTES:**  
 1« Periodically check the rubber hoses: if visual inspection enables detection of evident signs of deterioration, replace them.  
 2« Thoroughly clean with air to eliminate dust and deposits of foreign matter.

**N.B. THE QUANTITIES OF OIL REPORTED IN THE TABLE ARE APPROXIMATIVE.**  
**THE PERSON WHO WILL EXECUTE THE MAINTENANCE, WILL BE RESPONSIBLE AND HAS TO VERIFY THE EXACT QUANTITY OF OIL APPLYING TO THE CHECKPOINTS OF THE MAXIMUM LEVEL WHICH ARE MENTIONED IN THE USER & MAINTENANCE MANUAL OF THE MACHINE**