


# ECONOV

WITH **SULKY** GUIDANCE BAR

## QUICK INSTRUCTIONS

### CONNECTING THE KIT.

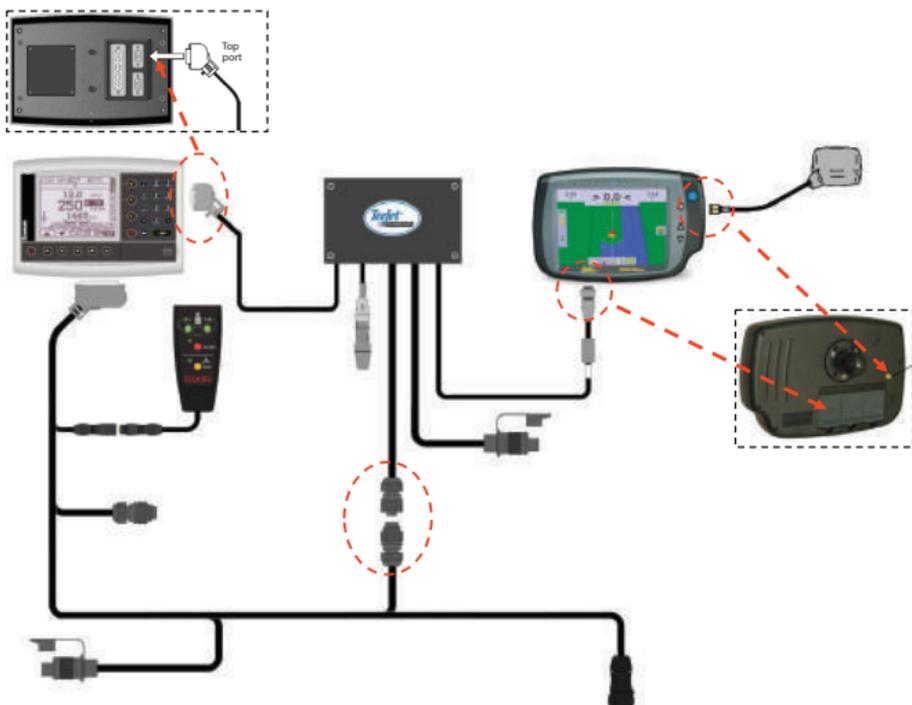


- Integral guidance bar
- Power button
- USB port with rubber
- Zoom/work display
- Illuminated touch screen

Opening/Closing of the left-hand chute  
Opening/Closing of the the right-hand chute

Manual and general mode

Automatic mode

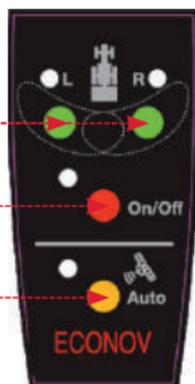

The following instructions are provided so that the equipment can be started quickly using the two main menus:

• **HOME**



• **CONFIGURATION**



**ALSO REFER TO THE MANUFACTURER'S INSTRUCTION MANUAL**



GPS



5. NMEA UTG

#### 4. GENERAL PF SETUP




5. GPS Baudrate

6. PORTS SETUP






19200

TOP PORT  
GPS Only


## CONFIGURATION

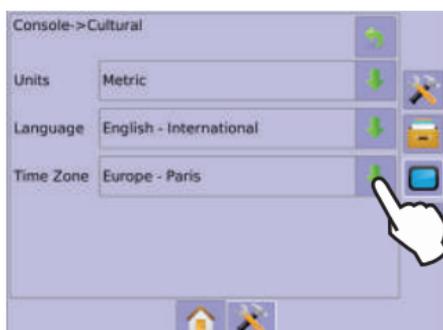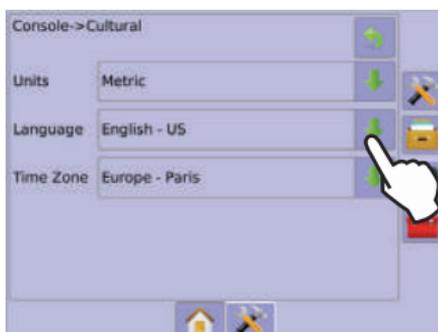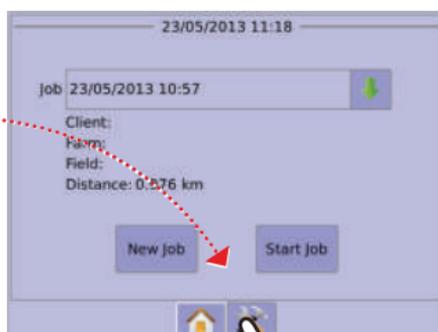

# LOADING THE SPREADER PROFILE

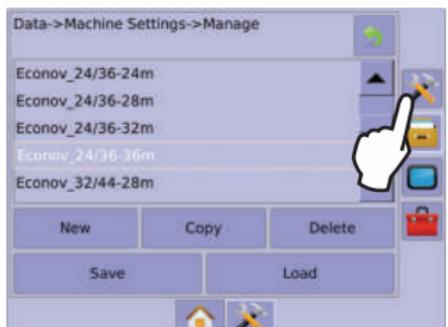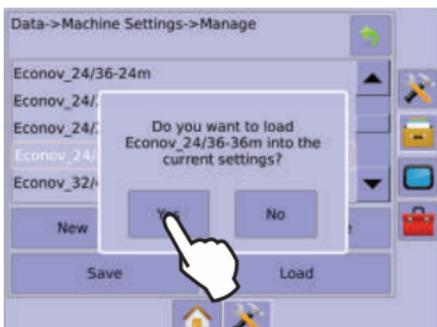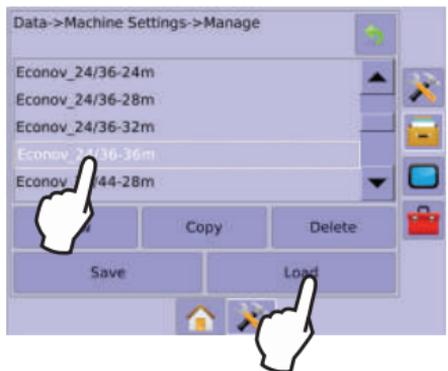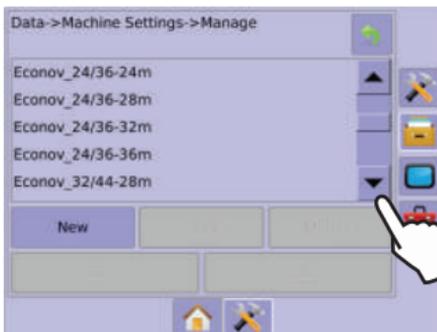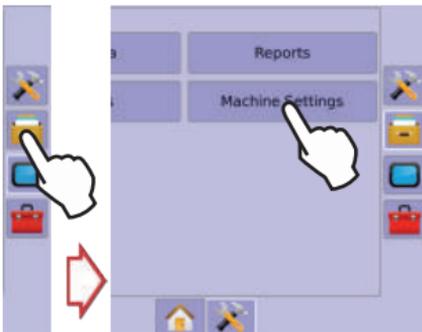





# ADDITIONAL SETTINGS

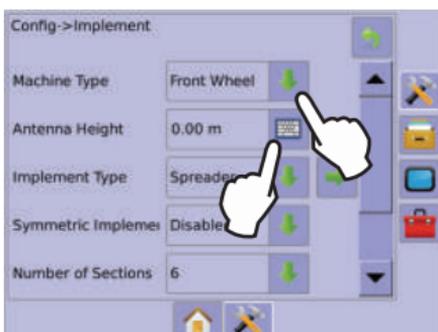



Enter the height of the antenna

«Spreader»

It configures itself automatically when the profile is being loaded.

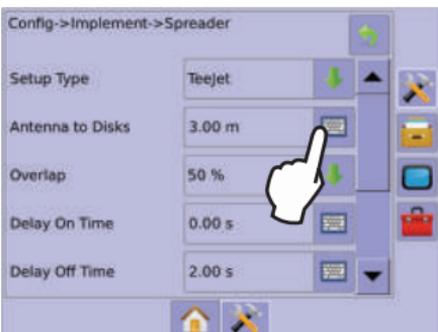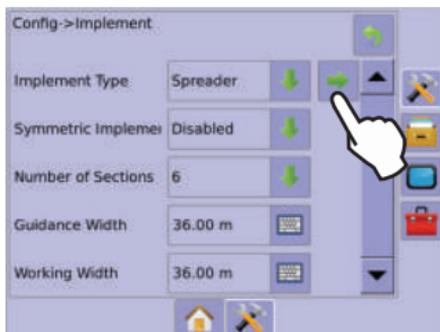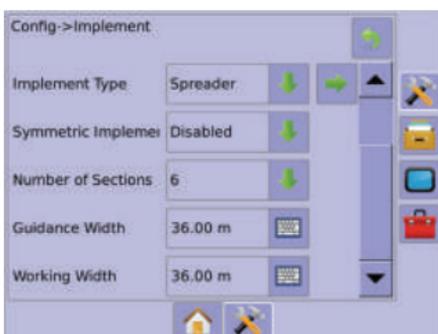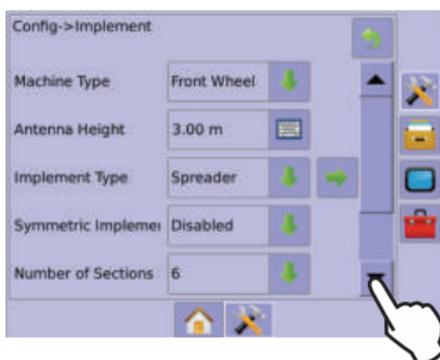


Enter the distance between the antenna and the centre of the spreader.

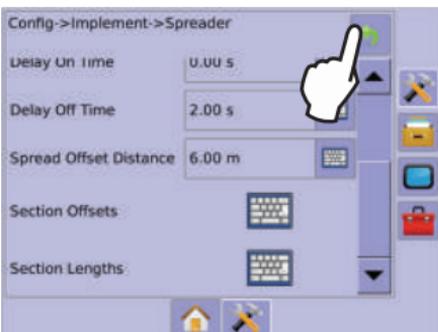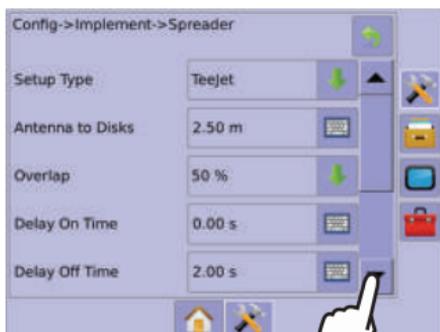



For information.

# TOOL CONFIGURATION

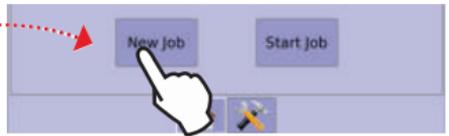


Launch the guidance line

 

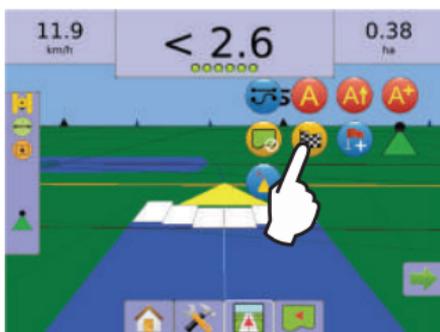

Finalise the outline 

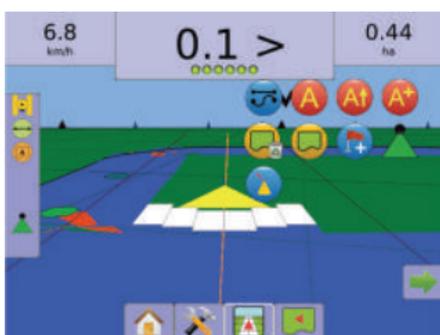

Continue spreading following the guidance lines.



Disable the «Auto» mode.